

GlueGlider Repair




Please follow this step-by-step process to repair a torn liner.



Step 1

Remove cartridge from GlueGlider Max unit.

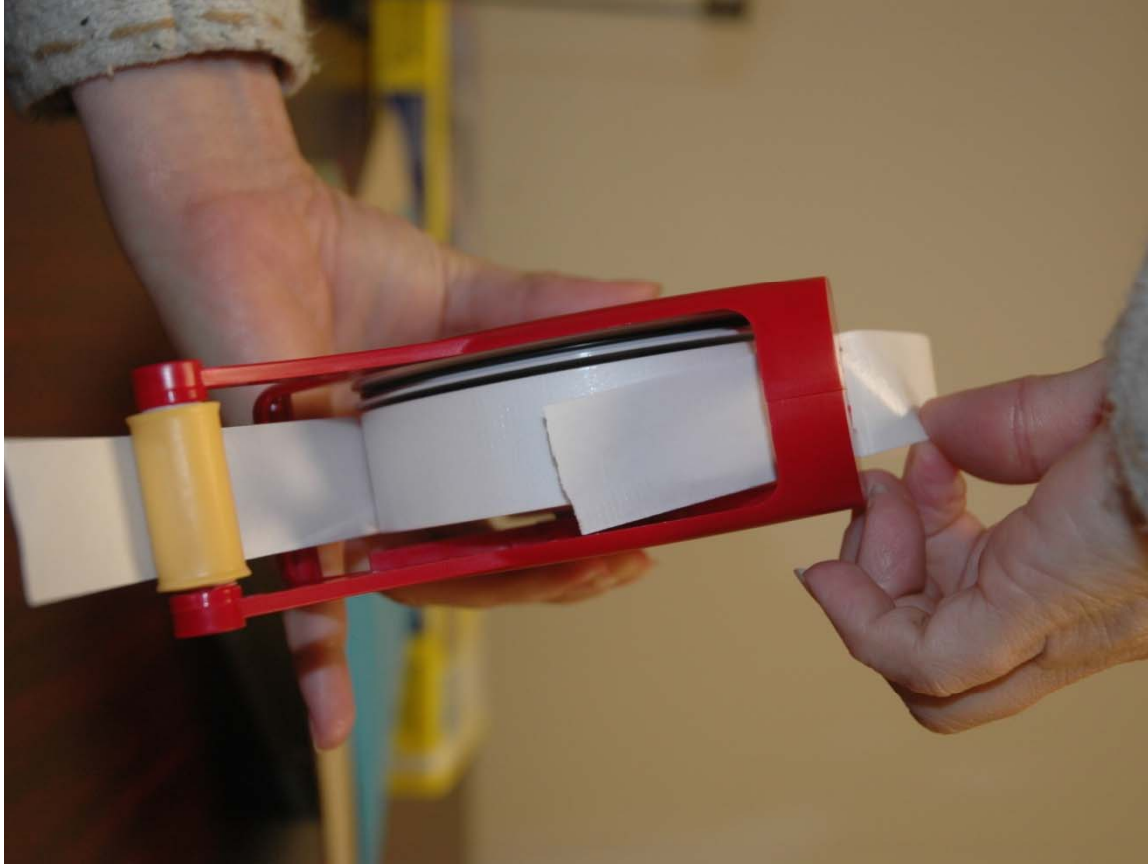

Step 2

Remove adhesive free liner...



Step 3

Pull adhesive free liner through top portion of cartridge.



Step 4

Completely unwind adhesive free liner from rewind spool.



Step 5

Be sure to remove the tape holding the liner on the rewind spool.



Step 6

Discard adhesive free liner once removed.



Step 7

Begin pulling adhesive coated liner...



Step 8

Pull liner below yellow roller...



Step 9

And around...



Step 10

Pull liner slowly being careful not to pull too much at once.



Step 11

Then thread liner over the top of the roll of adhesive.



Step 12

Place liner on top of roll, adhesive will hold it in place.



Step 13

Reach around back to pull liner through.



Step 14

Slowly pull liner...



Step 15

Continue to pull until end of liner can touch the rewind spool.



Step 16

Wrap end around rewind spool...



Step 17

Hold in place with finger.



Step 18

Tape liner to rewind spool.



Step 19

Hold liner tight while taping.



Step 20

Slowly turn geared wheel to wrap liner twice around rewind spool.



Step 21

The cartridge is now ready to be reloaded into the GlueGlider Max unit.